

DENSO AT20B、AT21B 設定集

UPC-A 字首補 0，EPC-E 字首補 0

START



DATA1



DATA2



END



UPC-A 字首不補 0，EPC-E 字首不補 0

START



DATA1



DATA2



END



DENSO AT20B、AT21B 設定集

UPC-A 字首補 0，EPC-E 字首不補 0

START



DATA1



END



UPC-A 字首不補 0，EPC-E 字首補 0

START



DATA1



DATA2



END

